

# Primo Oval Grill Unpacking Instructions

Instructions for Primo Oval XL 400, Oval LG 300, and Oval JR 200

Two Adults are Needed to Assemble the Grill.

 
Tools Needed: 7/16" and 1/2" Wrenches.

**IMPORTANT: DO NOT LIFT GRILL BY THE HINGE WHEN INSERTING INTO A GRILL TABLE**

**1** Select a smooth level area for unpacking, assembly, and insertion into a grill table. Ensure plenty of working space such as a garage or driveway.




**2** Open the top of the box, open the center flaps to reveal the top vent. Remove the top vent from the grill, then the top cardboard cover.

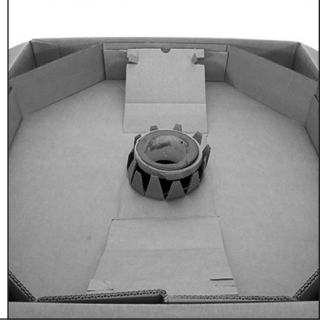

**3** Remove the cardboard inner protector around the grill and lay it flat. Use it to place the grill's internal components on it in Step 5.



 **4** Remove the outer cardboard. \*For an Oval XL 400 grill, attach the handle with a 1/2" wrench. Do not over tighten. Open the grill carefully.

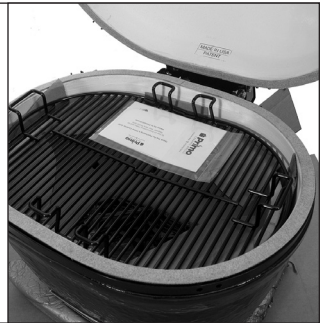

**5** Have an adult stand behind the grill and hold it securely to prevent tipping. Remove the internal components.



**6** Place the grill table or cart nearby and lock the casters. The top front bar on metal carts can be removed for easier installation.



**7** Two adults are required to lift the grill into a grill table or final location. One adult in the front and one behind. Open draft door and use the opening as a lifting point (Fig 1). From the back, firmly grasp the top of the base and lift the grill (Fig 2). **DO NOT LIFT THE GRILL BY THE HINGE.**

**8 BEFORE AND AFTER FIRST USE.** Use a box wrench to ensure that both bands are tight. Do not over tighten. Check tightness periodically.

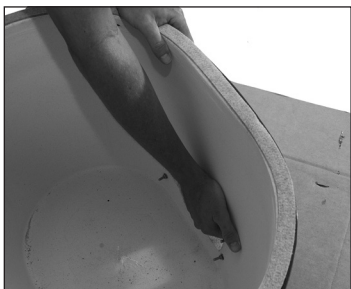
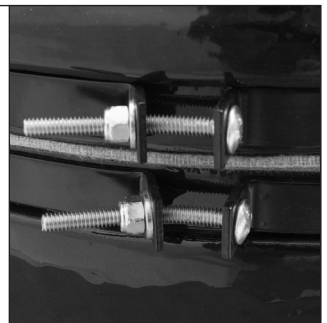 


Figure 1

 

Figure 2

**Primo Ceramic Grills**  
3289 Montreal Industrial Way  
Tucker, GA 30084  
Phone: 770-492-3920

**Register Your Grill at [PrimoGrill.com](http://PrimoGrill.com)**