



--	--

N° Object	Code	Description	Qty
2210	ZS3871	Rubber BBQ	2
2397	ZS3996	Protection covering BBQ 90	1
2398	ZS3997	Support for external skewers-holder BBQ 90	1
2399	ZS3998	Support for inner skewers-holder BBQ 90	1
2400	ZS3999	Hinge hood BBQ	2
2401	ZS4000	Pivot hinge hood BBQ	2
2402	ZS4001	Sliding upper device hood BBQ	2
2403	ZS4002	Sliding lower device hood BBQ	2

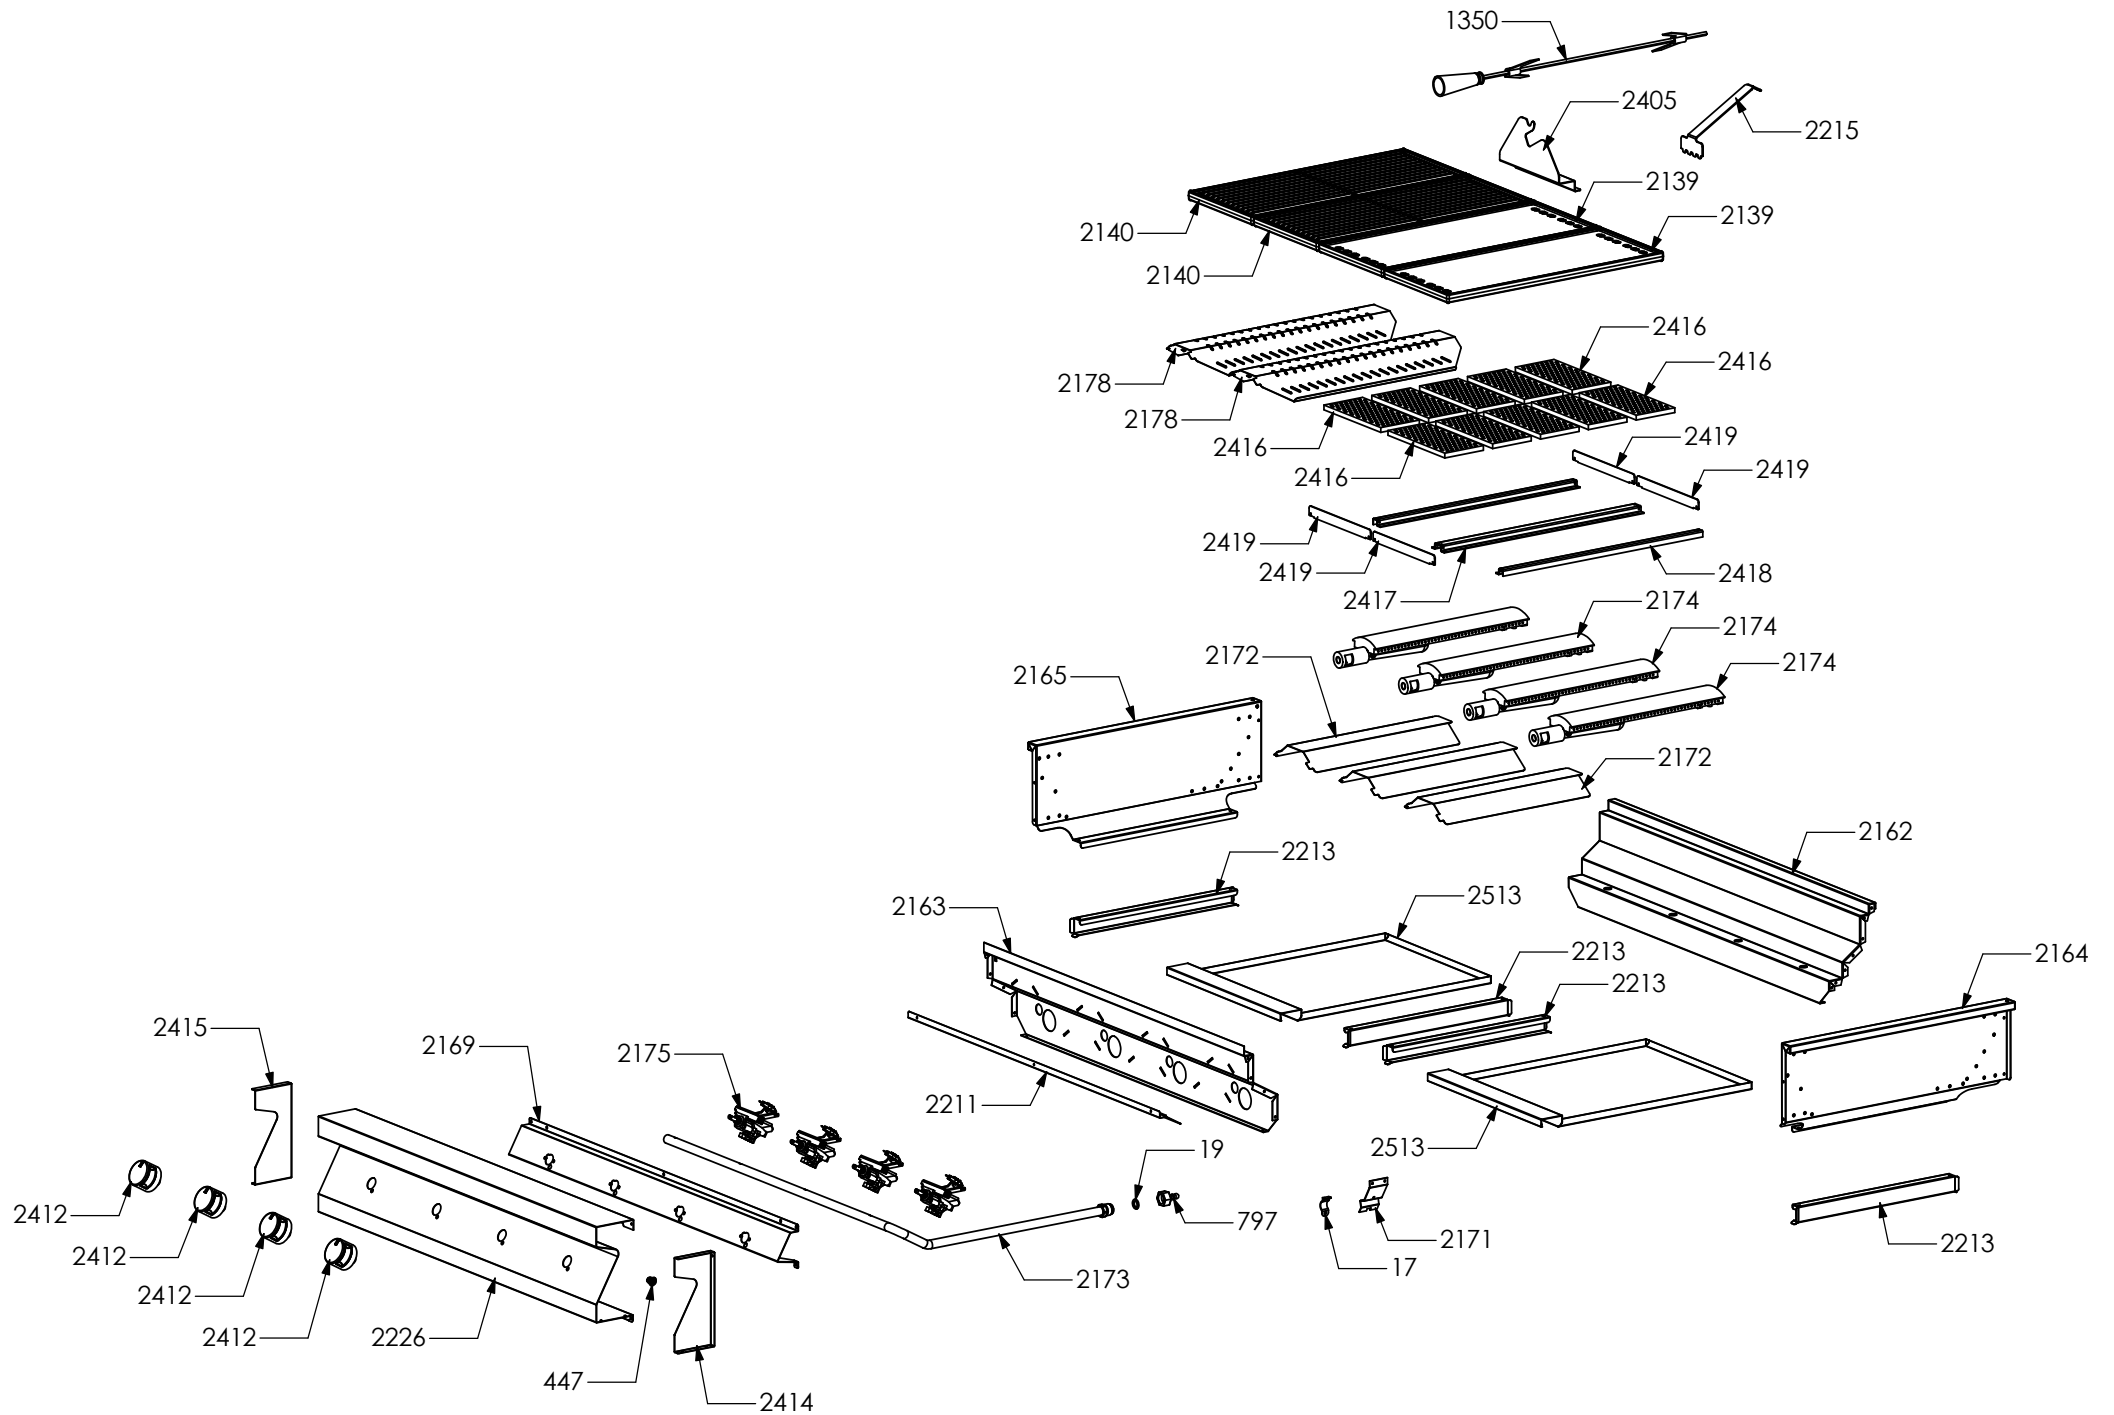


N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
17	370788	Ramp support bridle	1	2418	ZS4152	Lateral support for ceramic tiles for BBQ	2
19	400689	Gasket gas inlet	1	2419	ZS4153	Rear/front support for ceramic tiles for BBQ	4
447	ZS1061	Spring for griddle heating el. support	4	2513	ZS4217	Drip tray top BBQ 70/90	2
797	410645	Pipe holder (G30)	1				
1350	ZS2500	Turnspit for oven 90 (4 forks + handle) - 04	1				
2139	ZS3390	Two-sided cast-iron griddle for BBQ	2				
2140	ZS3391	Cast-iron open grid for BBQ	2				
2162	ZS3445	Rear side combustion area BBQ 90	1				
2163	ZS3446	Front side combustion area BBQ 90	1				
2164	ZS3447	Right side combustion area BBQ	1				
2165	ZS3448	Left side combustion area BBQ	1				
2169	ZS3452	Support for taps cooking top BBQ 90	1				
2171	ZS3454	Ramp support for top 90 BBQ	1				
2172	ZS3455	Burners deflector top BBQ	3				
2173	ZS3456	Ramp 4 burners cooktop BBQ 90	1				
2174	ZS3457	Burners cooktop BBQ	4				
2175	ZS3458	Tap burner on BBQ side table	4				
2178	ZS3467	Burners heat spreader top BBQ	2				
2211	ZS3916	Protection taps cooktop 90 BBQ	1				
2213	ZS3918	Guide for drip tray top BBQ	4				
2215	ZS3920	Tool for griddle cleaning BBQ	1				
2226	GR3979	Assembly complete lower reinforcement right side	1				
2414	ZS4148	Right cap for control panel BBQ	1				
2415	ZS4149	Left cap for control panel BBQ	1				
2405	ZS4004	Support for front skewers-holder BBQ	1				
2412	ZS4142	Knob XXL for BBQ	4				
2416	ZS4150	Ceramic tiles for BBQ	12				
2417	ZS4151	Central support for ceramic tiles for BBQ	1				

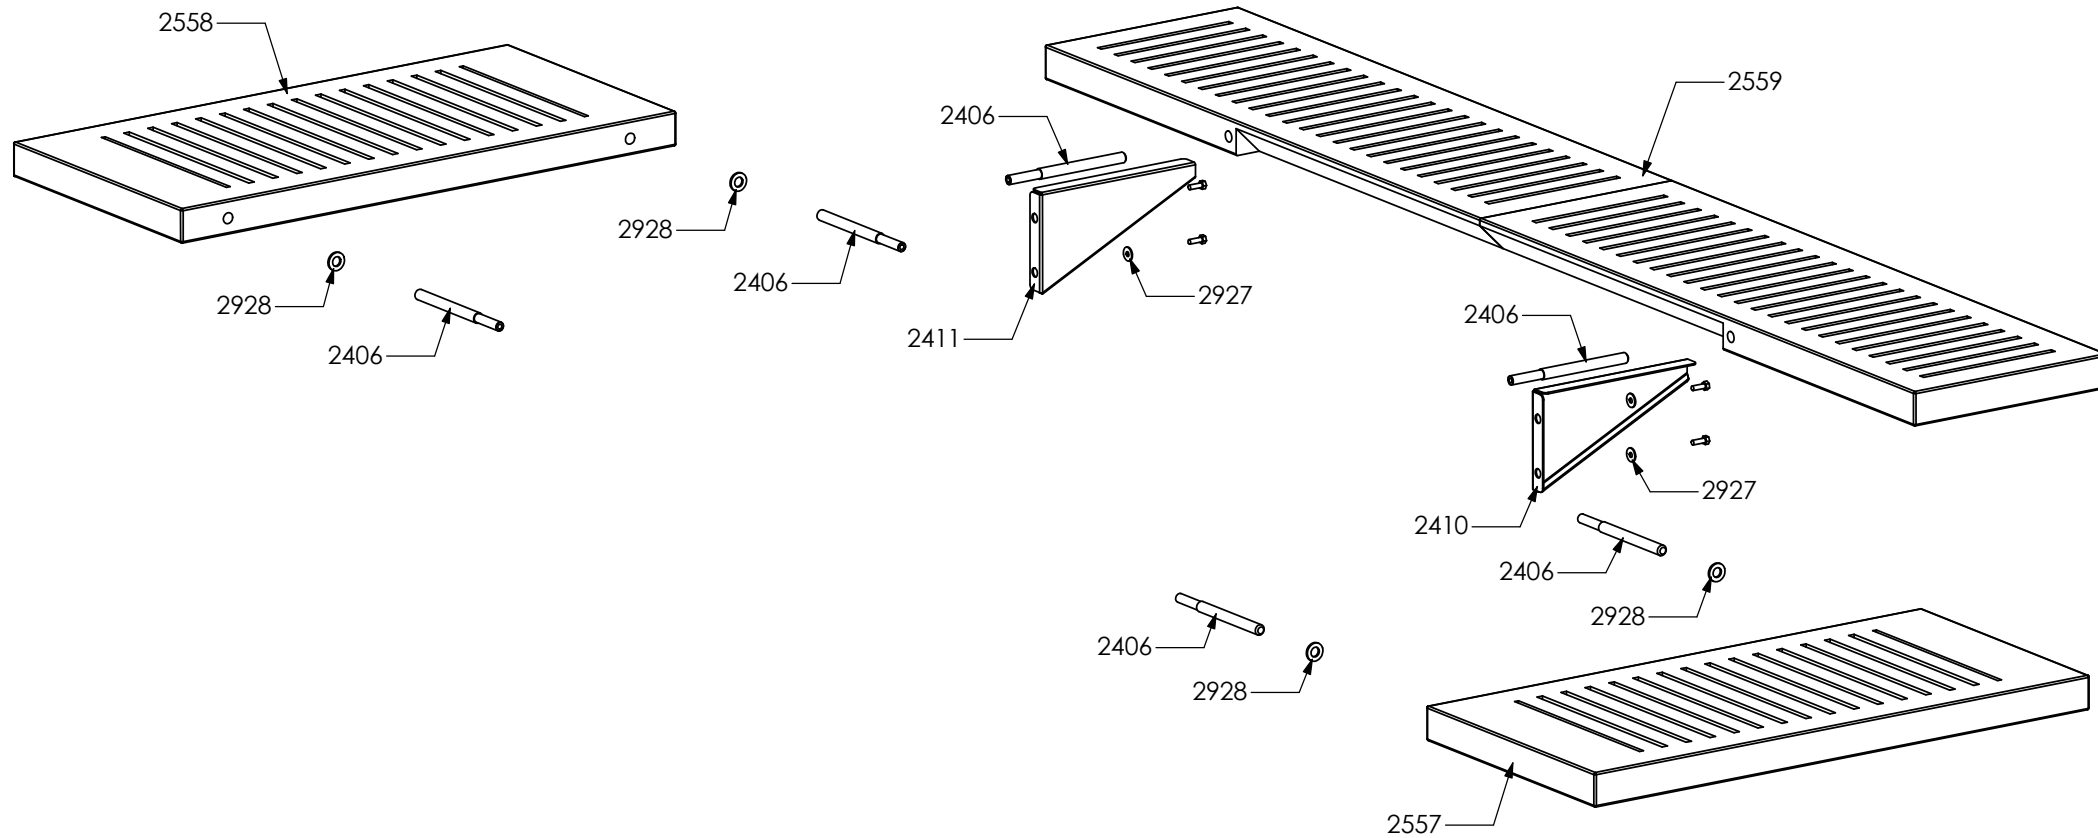


--	--

N° Object	Code	Description	Qty
2406	ZS4008	Support for side/rear wooden tables BBQ	6
2410	ZS4136	Support for rear table island BBQ	1
2411	ZS4137	Support left for rear bar BBQ elx	1
2557	ZS4005	Side wood right top BBQ	1
2558	ZS4006	Side wood left top BBQ	1
2559	ZS4007	Rear wood top BBQ 90	1
2927	ZS4298	Washer 5.3 x 15 x 1.2 s.steel	4
2928	ZS4304	Washer 10.5 x 20 x2 s.steel	4

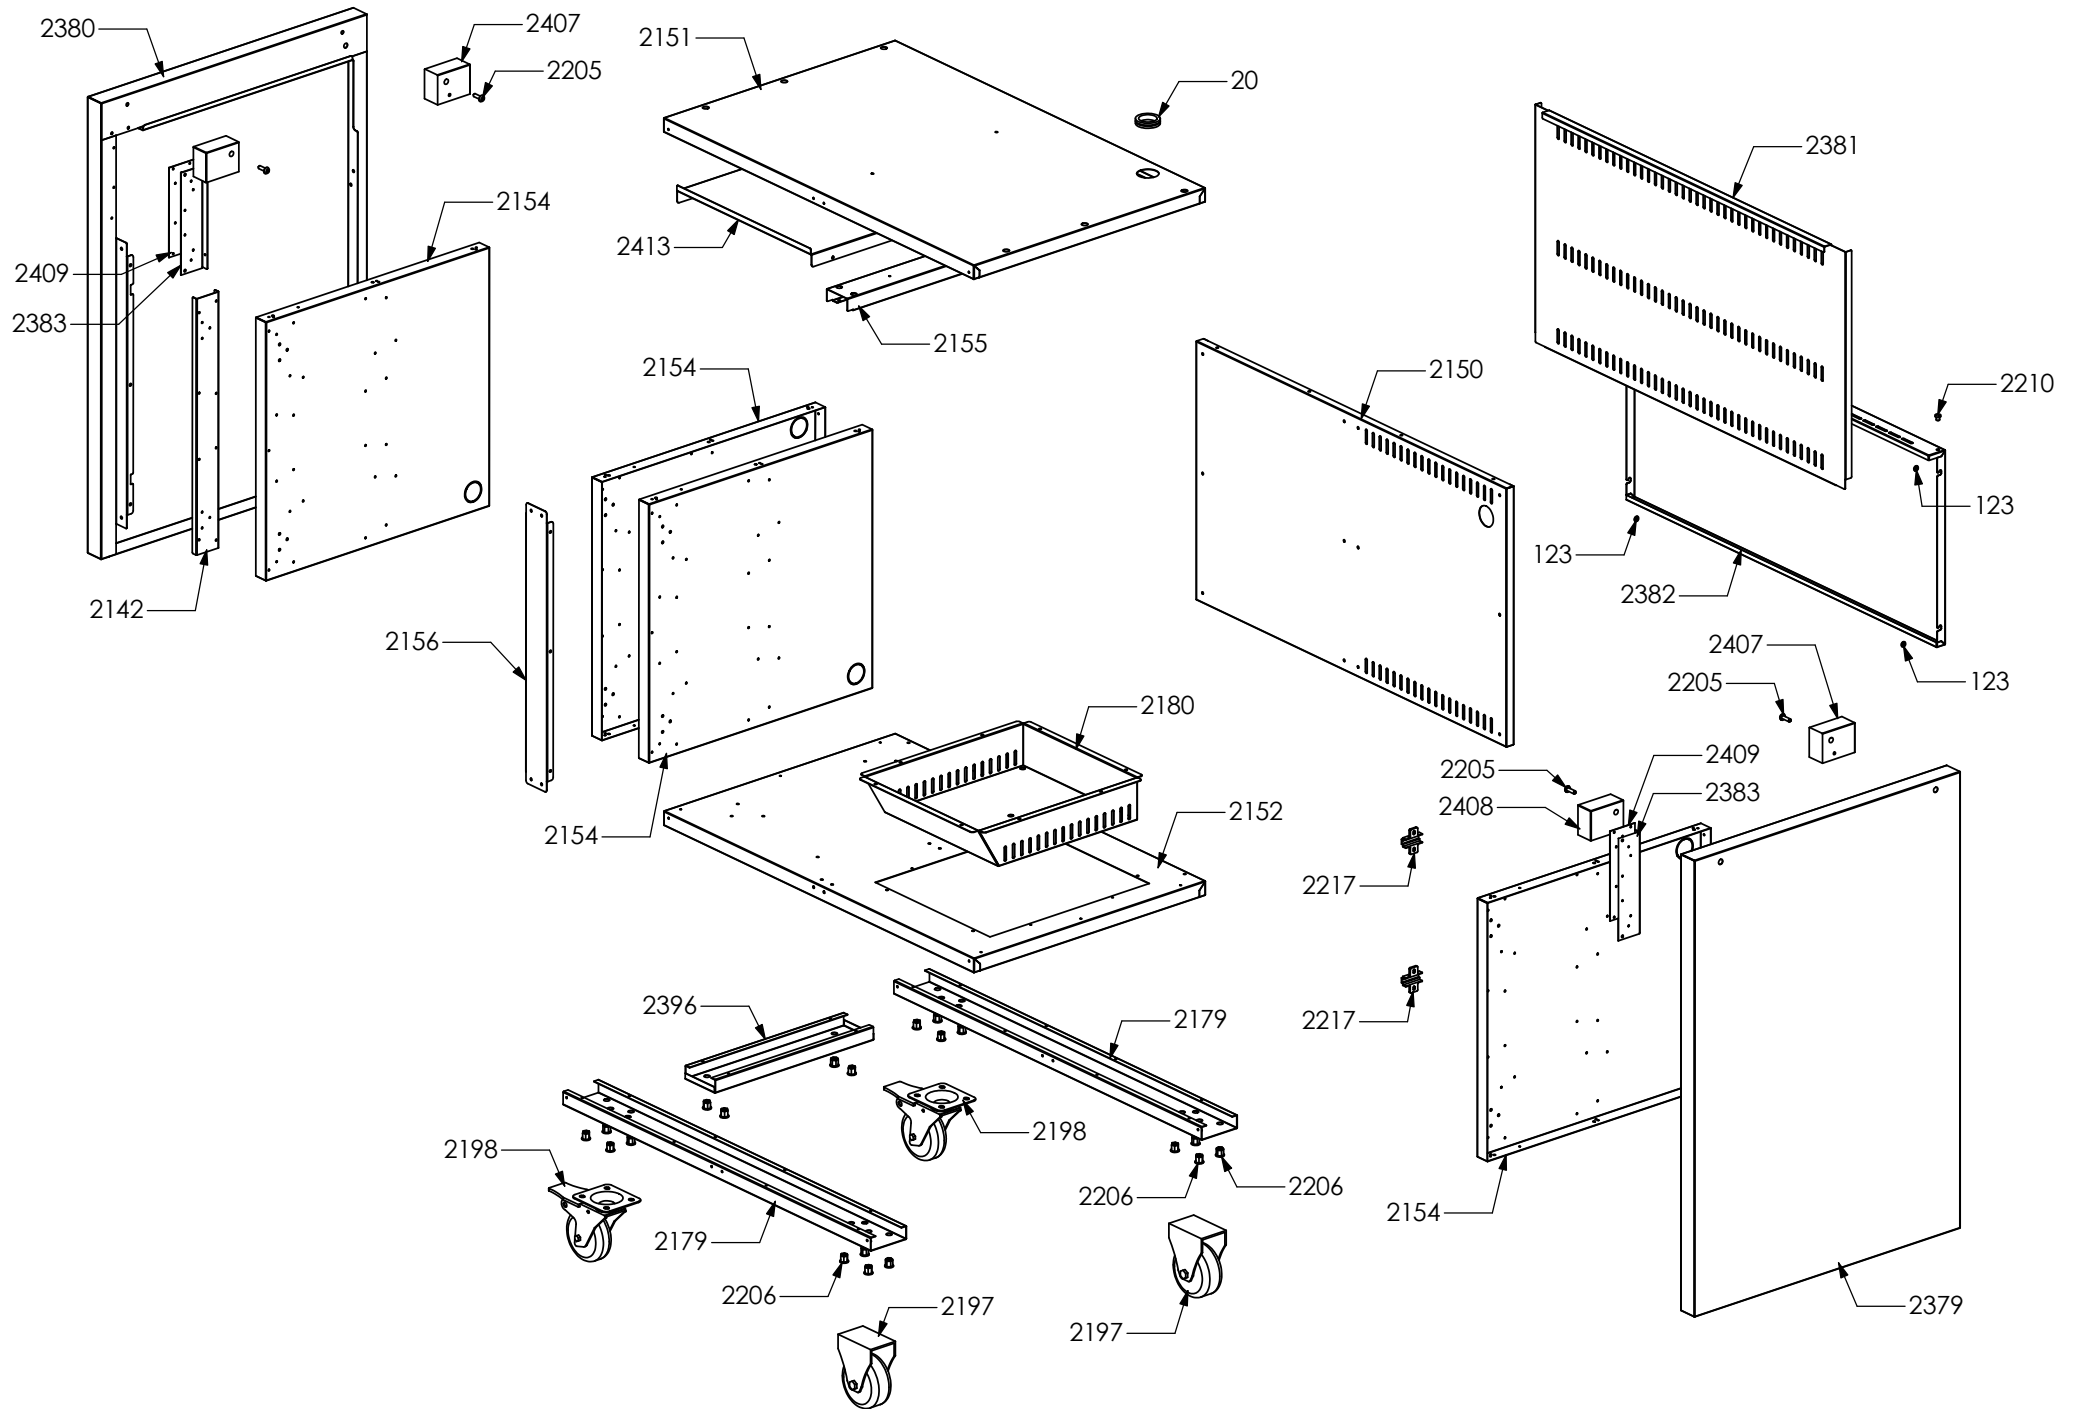

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
20	401520	Black cap for glass front panel	1	2407	ZS4009	Reinforcement rear for side BBQ	2
123	541011	Spacer washer for built-in oven	4	2408	ZS4010	Side front reinforcement BBQ	2
2142	ZS3422	Hinge reinforcement bottle compartement trolley BBQ	1	2413	ZS4147	Ceiling drawer BBQ	1
2150	ZS3430	Rear side trolley BBQ 90	1				
2151	ZS3431	Ceiling trolley BBQ	1				
2152	ZS3432	Base trolley BBQ 90	1				
2154	ZS3434	Lower panel trolley side BBQ	4				
2155	ZS3435	Upper central support for trolley BBQ	1				
2156	ZS3436	Front central support for trolley BBQ	1				
2179	GR3468	Assembly complete lower reinforcement right side	2				
2206	ZS3754	Tapping screw M8 galvanized	16				
2180	ZS3469	Tray for gas bottel trolley BBQ 90	1				
2197	ZS3632	Fixed wheel BBQ D100	2				
2198	ZS3633	Turning wheel BBQ D100	2				
2210	ZS3871	Rubber BBQ	2				
2217	ZS3922	H0 steel hinge base BBQ	2				
2379	GR3967	Assembly complete lower reinforcement right side	1				
2205	ZS3753	Tapping screw M5 s.steel	2				
2383	ZS3978	Support for control panel BBQ	1				
2409	ZS4135	Support for control panel and side BBQ ETX	1				
2380	GR3968	Assembly complete lower reinforcement right side	1				
2205	ZS3753	Tapping screw M5 s.steel	2				
2383	ZS3978	Support for control panel BBQ	1				
2409	ZS4135	Support for control panel and side BBQ ETX	1				
2381	ZS3969	Rear upper side trolley BBQ 90	1				
2382	ZS3970	Rear lower side trolley BBQ 90	1				
2396	GR3995	Assembly complete lower reinforcement right side	1				
2206	ZS3754	Tapping screw M8 galvanized	4				



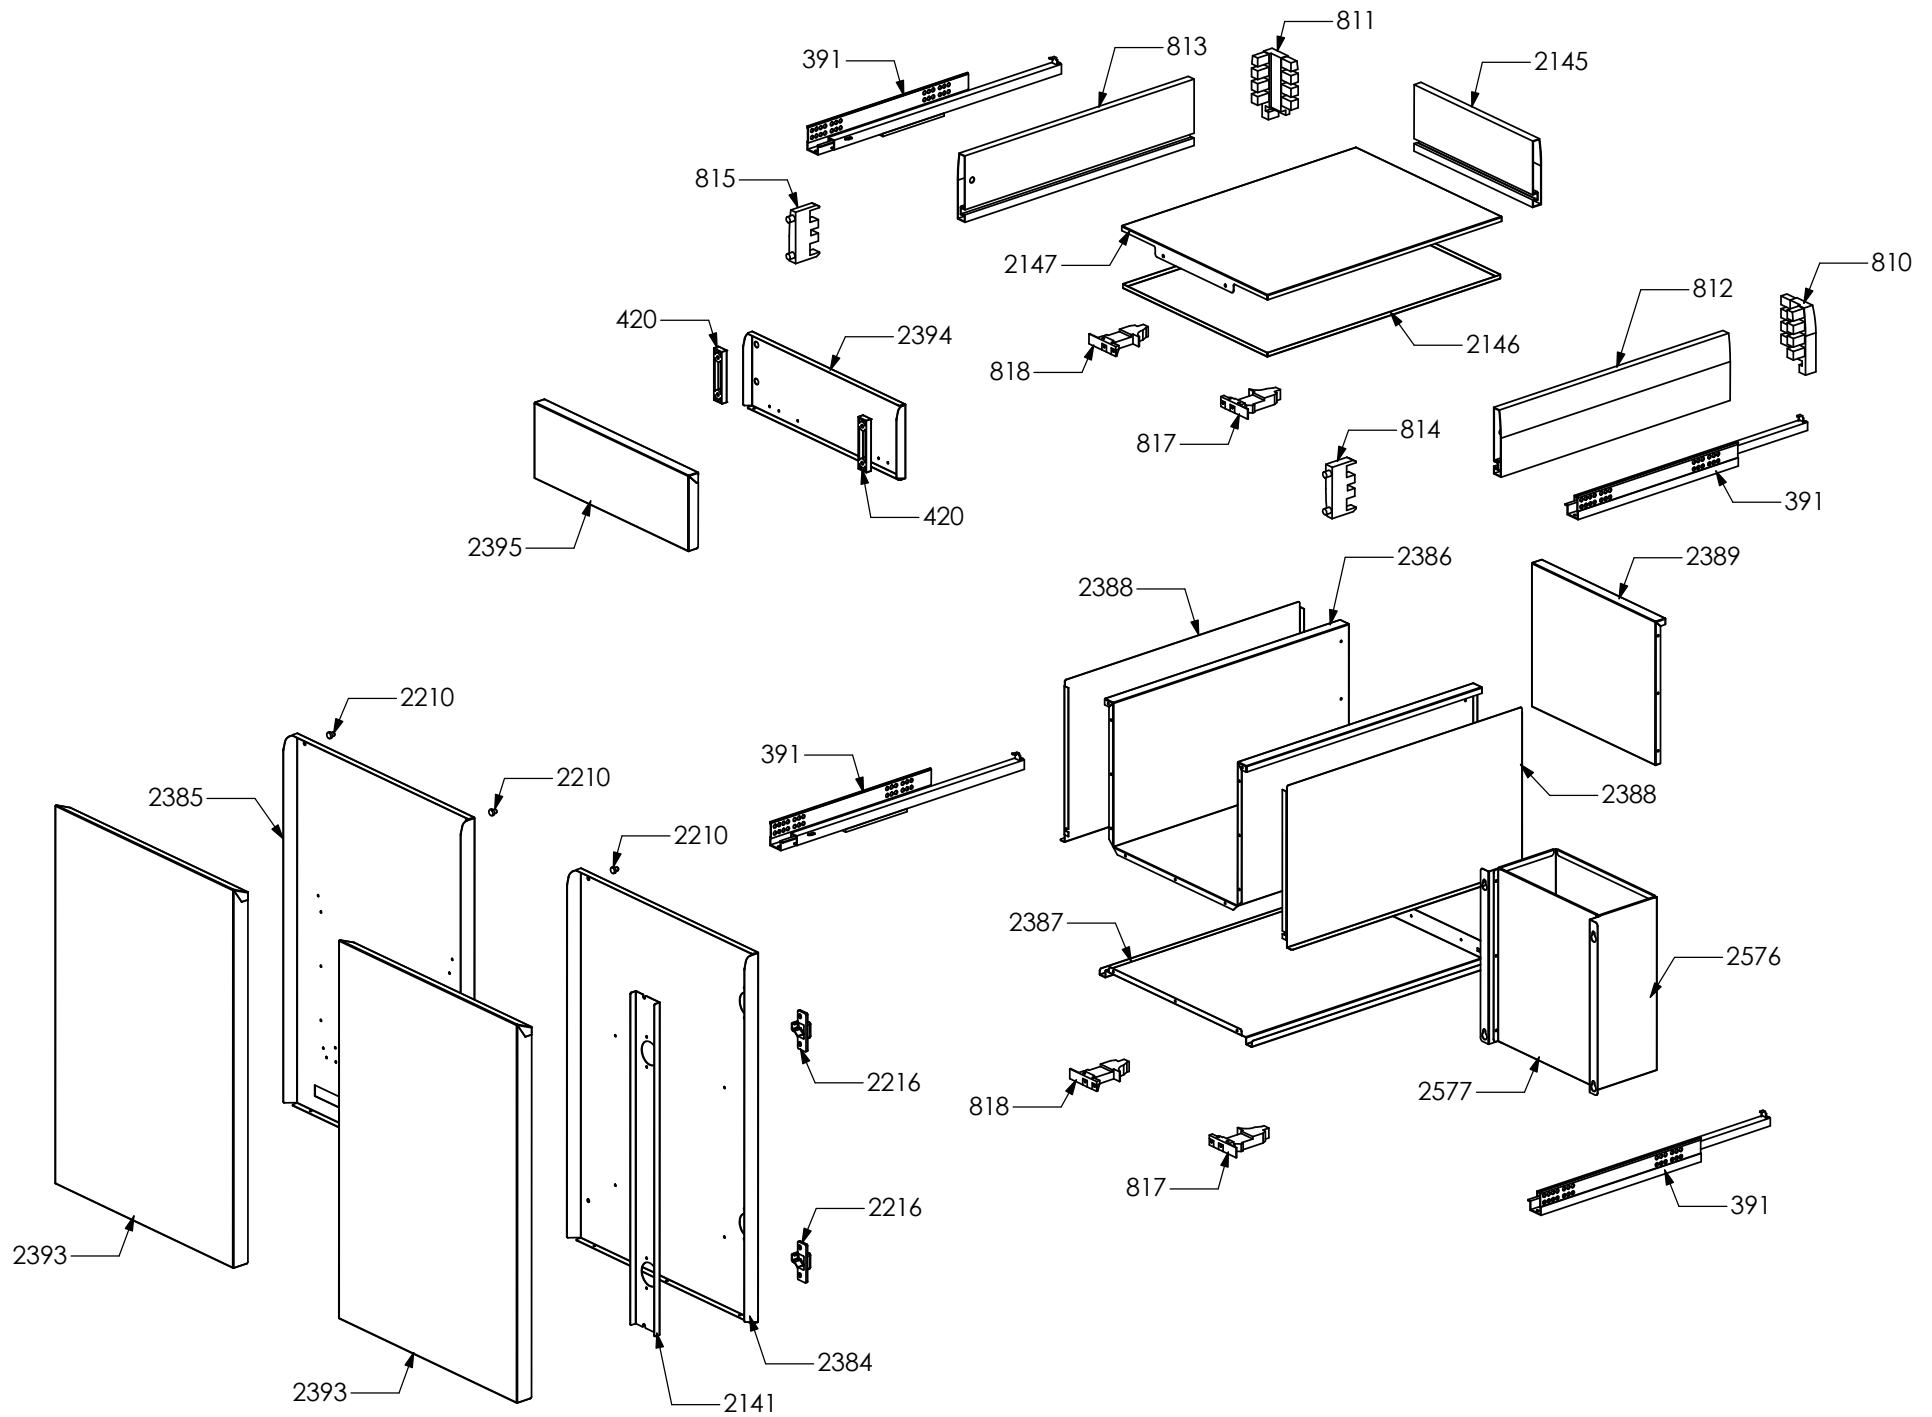

--	--

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
391	ZS0899	Couple legobox rails partial opening	2				
420	ZS1002	Blocking device for drawer support 2 hole	2				
810	ZS0449	Drawer right corner	1				
811	ZS0451	Drawer left corner	1				
812	ZS0453	Drawer right side	1				
813	ZS0454	Drawer left side	1				
814	ZS0455	Drawer right fixing support	1				
815	ZS0456	Drawer left fixing support	1				
817	ZS0458	Drawer right regulation clip	2				
818	ZS0459	Drawer left regulation clip	2				
2141	ZS3421	Hinge reinforcement door bottle compartement trolley BBQ	1				
2145	ZS3425	Drawer bbq trolley rear side	1				
2146	ZS3426	Support for clip drawer trolley BBQ	1				
2147	ZS3427	Bottom drawer trolley BBQ	1				
2210	ZS3871	Rubber BBQ	6				
2216	ZS3921	Doors hinge 94° BBQ	2				
2384	ZS3982	Counterdoor bottle door trolley BBQ	1				
2385	ZS3983	Counterdoor drawer trolley BBQ	1				
2386	ZS3984	Protection film for drawer trolley BBQ	1				
2387	ZS3985	Bottom drawer trolley BBQ	1				
2388	ZS3986	Side drawer trolley BBQ	2				
2389	ZS3987	Rear drawer trolley BBQ	1				
2393	ZS3992	Drawer door for bottle compartement BBQ 90	2				
2394	ZS3993	Counterdoor inner drawer trolley BBQ	1				
2395	ZS3994	Drawer door for inside drawer BBQ 90	1				
2576	GR4496	Assembly complete lower reinforcement right side	1				
2577	ZS4547	Inner side compartement BBQ	1				

N° Object	Code	Description	Qty
222	ZS0378	Polystyrene door protection	2
1093	410828	Pipe support	1
1210	BS0377	Adhesive tape 33 mt x 17h mm x th 0,6 mm (3M 4930)	160
1424	ZS2629	White glass wool for rear side 60 oven 04	2
2218	ZS3928	Cotter pin "R-shaped" white wire	4
2355	ZS4238	Instruction booklet BBQ Electrolux UK	1
2356	ZS4239	Instruction booklet BBQ Electrolux FR	1
2357	ZS4240	Instruction booklet BBQ Electrolux SE	1
2358	ZS4241	Instruction booklet BBQ Electrolux DK	1
2390	ZS3988	Lower panel drawer BBQ	1
2391	ZS3989	Side panel drawer BBQ	2
2392	ZS3990	Rear panel drawer BBQ	1
2426	ZS4265	Instruction booklet BBQ Electrolux IT	1
2427	ZS4268	Instruction booklet BBQ Electrolux DE	1
2428	ZS4303	Hole cap black plastic	6
2757	ZS4590	Service booklet Electrolux	1
2848	ZS4794	Adapter for energy regulator	1
2849	ZS4795	Adapter for energy regulator	0,8
2850	ZS4796	Adapter for energy regulator	2